




GENESIS 250/300 REAR SEAT WILL FIT YAMAHA® DRIVE® INSTALLATION INSTRUCTIONS

INCLUDED:

Hardware packs 1-7
Grab Bar
Bagwell Bracket
Lean Back Brackets
Armrests
Footrest
Main Frame
Bagwell Hold Downs.

TOOLS NEEDED:

Drill
17mm Socket
17mm Wrench
14mm Socket
10mm Socket
#3 Phillips Bit
3/8" Drill Bit
13mm wrench



Grab Bar



Lean Back
Brackets



Bagwell Bracket

Main Bracket



Armrests



Bagwell
Hold Downs



Footrest

Main Frame

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1

Remove hardware from struts and take off canopy. Retain hardware.



Remove hardware from gutters. Remove gutters by sliding them upward. Retain hardware and gutters.

2



3
Remove rear struts from both sides.
Retain all hardware.




4
Remove seat back. Retain hardware.




5
Remove motor cover panel by popping out plastic rivets. Retain hardware.



6
Take off basket by removing hardware located inside motor compartment. Retain hardware.

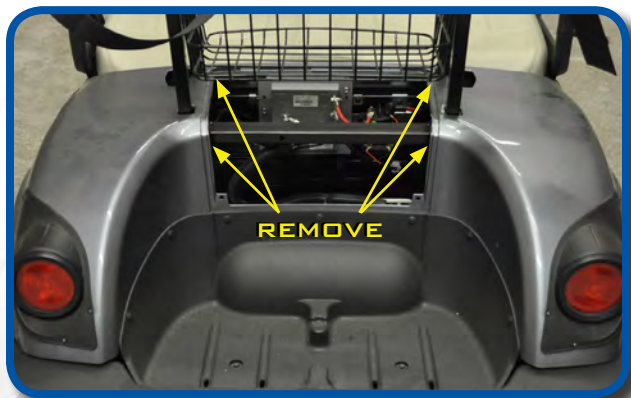


Place seat back brackets into body frame as shown, using retained hardware from step 6. Tighten bolts and repeat process on the other side.

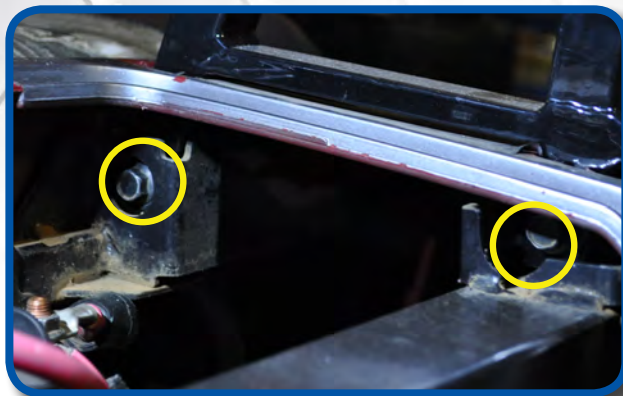

Attach factory struts to Main bracket's using retained hardware from step 3.

Attach factory strut to plastic gutter using hardware retained from Step 2.

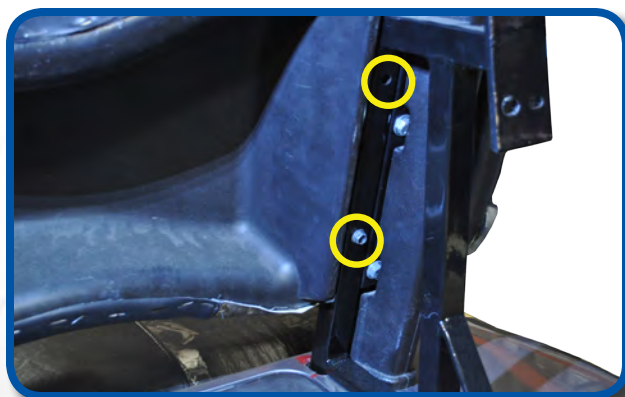

Using hardware retained from Step 4, attach seat back cushion to seat back as shown.

11
Attach bagwell hold downs to bagwell bracket as shown using hardware in pack 1. Cover nuts with caps supplied in pack.



12
Remove factory bolts from bagwell. Enlarge hole by drilling using a 3/8" drill bit.


IMPORTANT: Be sure to drill all the way through the frame.



13
Attach bagwell bracket to cart using hardware from pack 1 and tighten.



14
Attach main polyboard frame using hardware from pack 2.

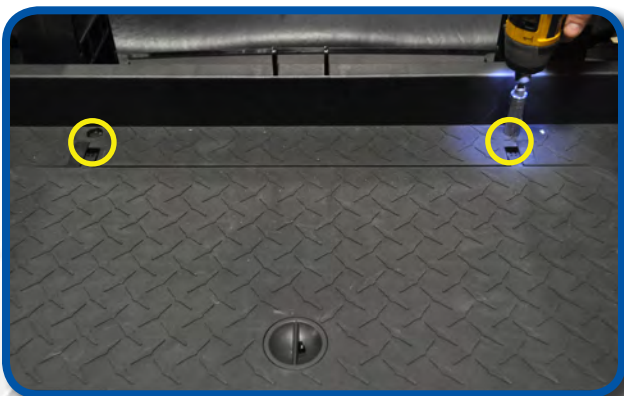



Attach main polyboard frame to bagwell brackets using hardware from pack 2. DO NOT TIGHTEN.


A) Using 3/8" drill bit, gently drill through back bumper as shown.


B) Using a #3 Phillips bit, attach bagwell bracket to cart using hardware from pack 2.




Attach armrest to polyboard using hardware from pack 3.

Using the appropriate labeled hole for your cart attach lean back bracket to main seat bracket using hardware from pack 4.

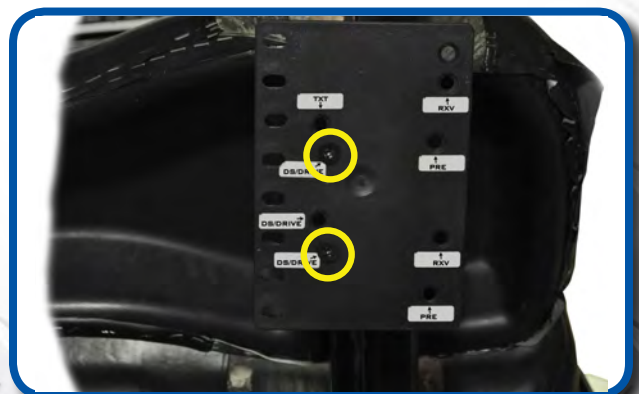


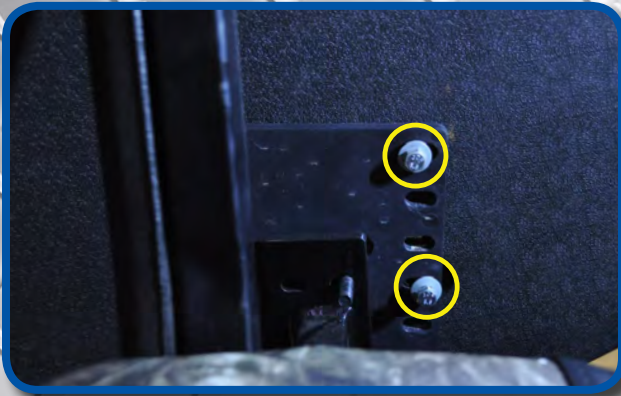


Choose desired height and attach lean back cushion to bracket using hardware from pack 5.

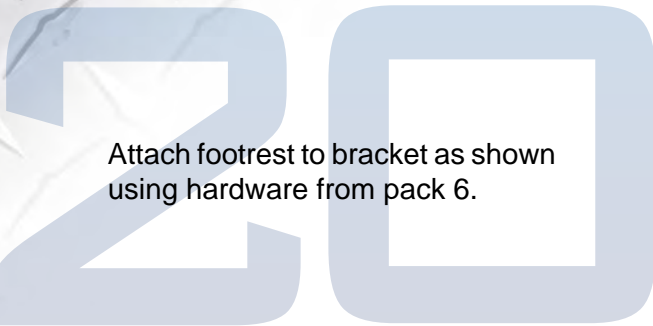

Attach footrest to bracket as shown using hardware from pack 6.

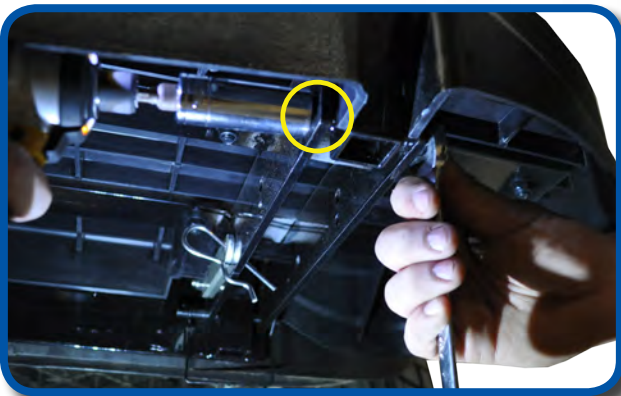

Attach grab bar to foot rest using hardware from pack 6.

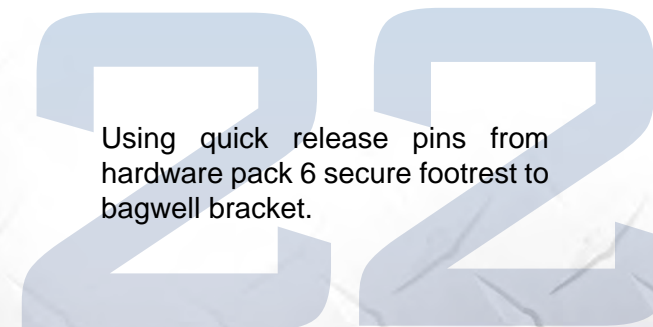


Using quick release pins from hardware pack 6 secure footrest to bagwell bracket.



23

Attach seat bottom cushion as shown using hardware from pack 7.

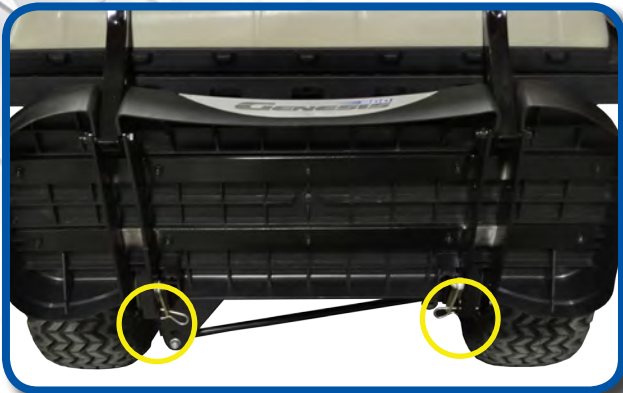

24

Footplate can be folded up by removing the four c-clips and folding forward. To lock footplate in up right poistion use brackets as shown.



INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS

Yamaha®, Yamaha® Drive®, G-14®, G-16®, G-19®, and G-22® are registered trademarks of Yamaha Golf-Car Company ("Yamaha"). Reference to Yamaha®, Yamaha® Drive®, any of the G-Series of Golf Carts, or any of Yamaha's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Yamaha or any of its parent or subsidiary companies.

HARDWARE PACKS

Pack 1

- 4 – 8x25mm countersunk #3 phillips
- 4 – 8x18mm flat washer
- 4 – 8mm lock nut
- 2 – 10x90mm hex bolt
- 4 – 10x20mm flat washer
- 2 – 10mm lock nut
- 4 – 6mm nut caps
- 4 – Rubber washers

Pack 2

- 2 – 8x70mm hex bolt
- 4 – 8x15mm flat washer
- 2 – 8mm lock nut
- 4 – 10x50mm Hex bolts
- 4 – 10x20mm flat washer
- 2 – 10mm lock nuts
- 10 – Rubber Washers
- 2 – 10x100mm countersunk #3 Phillips
- 2 – 10x20mm flat washer
- 2 – 10mm lock nuts

Pack 3

- 4 – 8x35mm hex bolt
- 4 – 8x15mm flat washer

Pack 4

- 4 – 8x30mm countersunk #3 Phillips
- 4 – 8x15mm flat washer
- 4 – 8mm locknut

Pack 5

- 4 – 6x25mm hex bolt
- 4 – 6x15mm flat washer
- 4 – 6mm lock washer

Pack 6

- 4 – 10x75mm hex bolt
- 8 – 10x20mm flat washer
- 4 – 10mm Locknut
- 8 – Rubber washers
- 4 – Quick release pins (easy remove hardware for folding in the foot plate)

Pack 7

- 8 – 8x40mm countersunk

